
## INSTALLATION INSTRUCTIONS FOR V98PCA & VPHC20PC

Clogged screen filters can impede the unique venting features of SALCO's 20" Vented Hatch Cover. To ensure maximum performance from your covers, establish a regular inspection schedule to determine when screen filters should be cleaned or replaced.

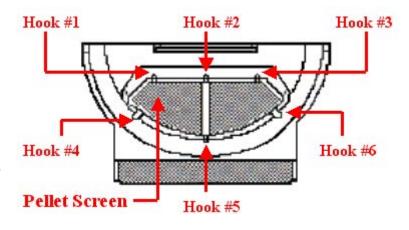


## **Removal Instructions:**

- 1. Remove the center rivet from each screen by punching out the center pin. Then remove the rivet body.
- 2. Grip the inside (straight) edge of the pellet screen with both hands.
- 3. Pull the inside edge steadily toward you then upward until the center hook (Hook #2) releases.
- 4. Pull the center of the screen gently upward; pull Hook #1 toward you until it releases.
- 5. Slowly rotate the pellet screen clockwise to release the remaining hooks and free the screen.
- 6. Remove debris from the opening beneath the screens and debris that might have fallen upon the cover itself.

## **Replacement Instructions:**

- 1. Slide Hooks #1 and #4 into place, then slide Hook # 5 into place.
- 2. Gently pull the center of the inside edge of the screen up and push Hooks #6 and #3 into place.
- 3. Push Hook #2 into place.
- 4. Firmly tap all edges of the screen to ensure that all the Hooks are securely in place.

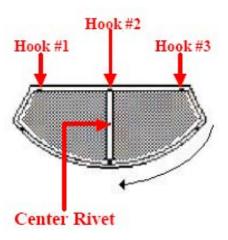

## Salco Products, Inc.

1385 101st St., Suite A Lemont, IL 60439 ph 630-783-2570 • 22311 Hufsmith-Kohrville Rd. Tomball, TX 77375 ph 281-351-0274

www.salcoproducts.com

Page 1 of 1